


## 1. FEATURES

- High quality picture and natural color :  
Having high quality image sensor, 1/3" color CCD with 410,000(ND)/470,000 (PD)pixels, it realized the high quality picture of more than 450 TV lines. And a noise proof circuit which improves S/N ratio and a line enhanced circuit which enhances definition of the image are embedded in a Micro-processor which is indicated only to KOCOM's use, and a Digital Signal Processing IC (DSP) and Micro-Processor are used to realize the most defined screen of Natural Color.
- Various automatic and manual function;  
Having DSP IC, the camera can be set-up automatically according to the user environment. And, the camera user can also control the function manually. For more details on the automatic and manual function control, refer to page 5.
- Auto-iris lens function;  
It is available to use DC operation auto-iris lens and video operation auto-iris lens.
- High quality video output;  
It is available to have a high density and high quality video output by S-VHS

## 2. PARTS AND ACCESSORIES

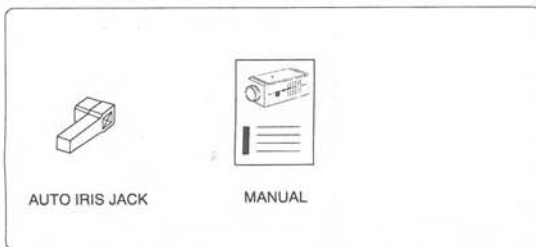


1

## 3. SPECIFICATIONS

Description	KCC-530N (NTSC)	KCC-530P (PAL)
Power	AC24V(±20%)	
Effective pixel	410,000	470,000
Image sensor	1/3 Inch	
Horizontal resolution	450 TV lines	
Power consumption	200mA or less	
Scan system	525 line 2:1 interlace	625line 2:1 interlace
Scanning frequency	(H)15.734KHz (V)59.94Hz	
Sync. system	Internal Sync.	
Video output signal	1.0Vp-p Composite signal (Sync. : 0.286Vp-p, Video : 0.714Vp-p)	
S-VHS	Y Sig, C Sig, GND	
γ correction	γ=0.45	
S/N ratio	48dB (AGC off, γ=1, Y signal)	
White balance	Automatic White balance control (Manual : One-push priority 3200°K, 4600°K, 5600°K)	
Shutter speed	Auto iris (1/50, 1/60 - 1/100,000), Manual(1/50, 1/60, 1/250, 1/500, 1/1,000, 1/2,000, 1/4,000, 1/10,000, Flick-less)	
Min. illumination	1.5Lux (F1.2Lens, AGC ON, 25%)	
Gain control	Automatic gain control (0 ~ 18dB), off	
Back light compensation	Off, Pattern1, Pattern2	
Iris	CS-Mount DC Auto iris lens, Video DRV Auto iris lens(Shutter =manual), CCD-iris (Shutter=Auto)	
Camera title	On (8character), Off	
Operation temperature	-0°C ~ +40°C	
Wiring distance	50m- φ 0.65 single cable, 100m-5C-3V coaxial cable	
Output terminal	BNC connector	
Dimension	67(W) x 55(H) x 153(D), 280g	
Housing material	Plastic	

2

## 4. NAME OF EACH PARTS

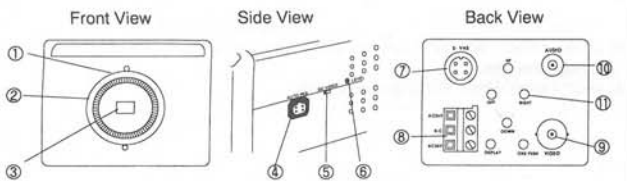

- Lens holder fixing screw : Fix the C/CS mount lens holder and prevent loosening focus.
- Lens holder : Can change the holders between C-mount and CS-mount according to the lens.
- Image part : Image is relayed to this part through lens. Having CCD and optical low-pass-filter(L.P.F), any dirt or finger prints which may deteriorate picture quality must be avoided in this part.
- Auto iris lens connector : Connection for auto iris lens operation cable.
- Switch for auto iris lens operation : Auto iris lens operation method can be selected by this switch according to the lens type.  
(Left : DC operation, Right : Video operation type)
- Level adjustment volume: Lens operation range can be adjusted by this in DC operation type lens using.
- S-VHS(Y/C) output connector : Y/C output
- Power input : AC12V, 300mA
- Video output connector : Cable connection for video output(BNC).
- Audio output connector : Cable connection for audio output(RCA).
- Function key switch (6 buttons)
  - DISPLAY- Menu display function ON or OFF
  - LEFT, RIGHT- Moving menu cursor to left or right handside
  - UP, DOWN -Moving menu cursor to up or downside.
  - ONEPUSH - By pushing this button, white balance can be set-up automatically according to using environment.

3

## 5. HOW TO HOLD LENS

### 5-1. Cautions before holding lens

 

- With the protection lid taken off, be careful not to expose the lens to the direct sunlight or other strong lights.
- Assemble the camera and lens immediately after taking the protection lid off. Do not leave the lens without the protection lid for long, or CCD and optical L.P.F(Low Pass Filter) could be contaminated with dusts and then it could deteriorate the function.
- As it is assembled with C-Mount holder at the factory, please replace the C-Mount holder with the CS-Mount holder (included in the package) when you need to use a CS-Mount lens.

### 5-2. Lens holding and focus adjustment

- After taking the protection lid off, assemble C-Mount lens directly to the camera. (For the use of CS-Mount, however, firstly, remove the C-mount holder. Secondly, join the CS-Mount holder and then assemble the lens.)
- For the connection between the monitor and camera, use a coaxial cable, and set the power of the camera with the right polarity.  
(Wrong polarity may cause problem)
- Take an object which is more than 2 meters away, and check if the distance meter is set to the infinity, and then by using the iris and the holder adjust the screen to be properly bright and the image to be best.  
(After adjustment, fix lens holder by fixing the lens holder fixing screw)

### 5-3. Using lens and its holder

- C-MOUNT Lens: Use both of holder ① & ② with lens
- CS-MOUNT Lens: Use only holder ② with lens
- How to use Auto Iris Lens:  
This camera can be used with Auto Iris Lens (DC or video operation type) or manual iris lens by easy switch operation without any change of addition or deletion in the circuit.
  - Recommended Auto Iris Lens
  - By using the way of manual operation in article 6(page5), set the function of Iris from CCD-Iris to CS-Mount and at this time, fix the shutter.
  - Select the switch position according to lens operation type (refer to article 4-5, page 3).
- How to install;
  - The wire of Auto Iris Lens should be connected with Auto Iris terminal like the diagram in right side (Video operation type)
  - In case of DC operation type, it can be applied to standard
  - Connection terminal should be connected to the Auto Iris terminal attached at the back side of the camera.
  - The lens holder should be set up by the same way of lens holding in article 5-2, page 4.

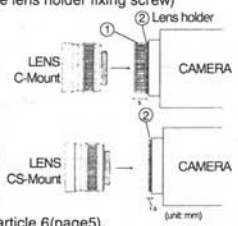

4

WARRANTY			
PRODUCT	CCD COLOR CAMERA		
MODEL	KCC-530N/P		
DATE OF PURCHASE	YEAR 19	MONTH	DATE
TERMS OF WARRANT			
SALES AGENT			
ADDRESS OF SALES AGENT			


We will guarantee as follows :

1. This product is made through rigid quality control and test process
2. In case that this product is out of order due to the defect in manufacturing even through the product has been normally used, A/S will be afforded at free of charge for one year after purchasing date.
3. In case of the followings, KOCOM will afford A/S with charge of cost even through in warrant period.
  - 1) Out of order by user's mishandle or move
  - 2) Case of wrong repair or damage by modification of inner part
  - 3) Out of order by natural disaster or disorder in power source
  - 4) Case of omission, correction without confirmation, loss of warranty card.
4. Please be careful for keeping this warranty card as it won't be reissued.
5. please surely present the warranty card in A/S request.

FOR AFTER-SALE SERVICE REQUEST
<ol style="list-style-type: none"> <li>1. Describe the product name</li> <li>2. Describe the model name</li> <li>3. Describe the disorder contents for A/S</li> <li>4. Describe the address or telephone number of consumer</li> </ol>



**DIGITAL COLOR CCD CAMERA**  
 (INSTALLATION/OPERATION MANUAL)  
**KCC-530 N / P**  
 (ELECTRONIC SHUTTER, AUTO-IRIS LENS)

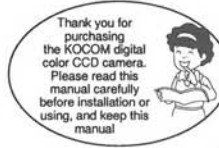


**INDEX**

1. FEATURES
2. PARTS AND ACCESSORIES
3. SPECIFICATIONS
4. NAME OF EACH PART
5. HOW TO HOLD LENS
6. HOW TO SELECT FUNCTION/ON SCREEN CONTROL
7. CAUTIONS IN INSTALLATION
8. SELF-CHECK POINTS BEFORE ASKING A/S SERVICE
9. WARRANTY CARD & A/S



**6. HOW TO SELECT FUNCTION/ON SCREEN CONTROL**

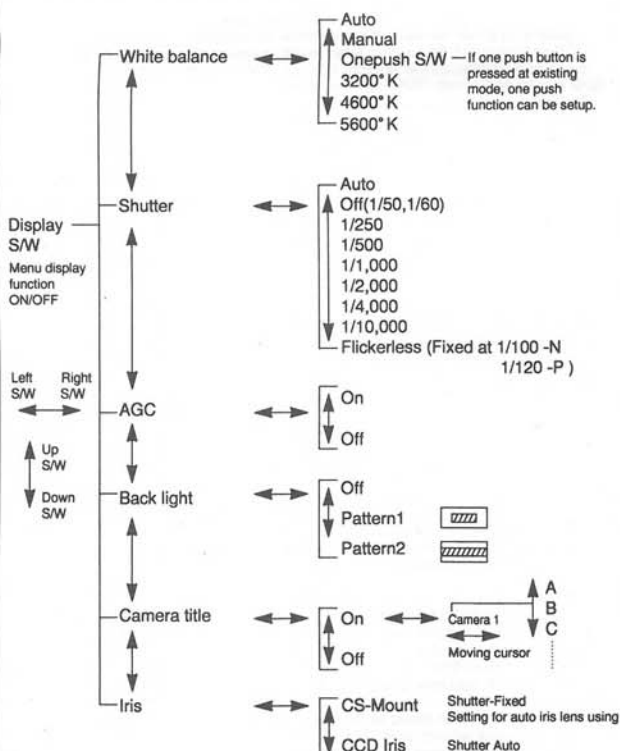

**7. CAUTIONS IN INSTALLATION**

- 1) Assemble the camera and lens quickly in a clear place to avoid dust.
- 2) As this camera is composed with high resolution and very precise components, be careful not to drop it or do the shocking to it during assembly.
- 3) Do not install it facing the sun so that the direct ray of light may not come through the lens.
- 4) Avoid places where shaking happens often.
- 5) Do not pull the cable. It may cause disconnection or shorts of wire.
- 6) Do not touch the inside of camera even if troubles happened. Just contact A/S center nearby
- 7) Install it safe so that no water goes into it. Contact the agent who sold the unit (A/S center) when water goes into it.
- 8) Temperature of the spot should be within the allowed range specified in the specification.
- 9) If it appears to be defective, put off the power and contact the selling agent nearby (A/S center). Further use may lead to greater troubles.
- 10) Before installation, make sure disconnect the power supply first, check the ground connection, and then install it.

**8. SELF-CHECK POINTS BEFORE ASKING A/S SERVICE**

CONDITIONS	CHECKING POINTS
If the screen is not on.	<ul style="list-style-type: none"> <li>• Check if the power is connected for sure and correctly. (Check the AC cord and DC adapter to ensure that 110V or 220V is correctly set in accordance with the country standard.</li> <li>• Check if the iris is closed or if it is adjusted correctly.</li> <li>• Check if the cable is connected correctly.</li> </ul>
If the screen is not clear or is spread.	<ul style="list-style-type: none"> <li>• If dust is seen through the monitor screen after fixing lens, disassemble the lens and clear off the dust on the surface of CCD with blower or soft cloths.</li> <li>• Check if the lens is focused properly.</li> <li>• Check if the monitor color and brightness is adjusted properly.</li> </ul>