


RJ45	10/100Base-T Ethernet port
USB	Mini USB port for firmware update
DEF	Pins for firmware update
STATUS	Red light-emitting diode indicating micro-controller status
RS485	Green light-emitting diode indicating RS485 connection status
F1	miniSMDC 0,5A fuse
AC/DC	Power supply terminals
G	RS485 interface for communication (green wire)
Y	RS485 interface for communication (yellow wire)
LAN (green)	Green light-emitting diode indicating Ethernet activity
LAN (yellow)	Yellow light-emitting diode indicating Ethernet status

3. INSTALLATION

ATTENTION: The wiring is permitted to be done only while ESIM364 system is completely powered down.

1. Connect **AC/DC** terminals to ESIM364 system's **AUX+** and **AUX-** terminals. Alternatively, you can power up the device by 10-24V AC or DC power supply unit (see **2.1. Electrical & Mechanical Characteristics**).
2. Connect **G** and **Y** terminals to ESIM364 system's **G** and **Y** terminals respectively (see Fig. No. 2).
3. Connect ELAN3-ALARM to local area network router using the Ethernet cable (see Fig. No. 2).

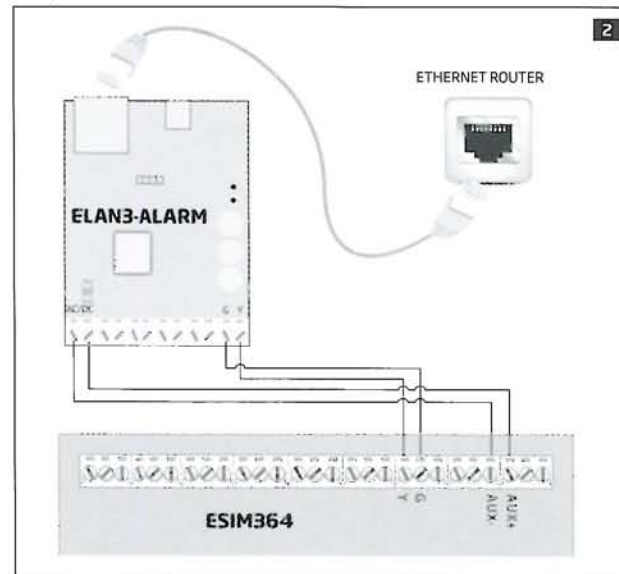

4. Power up ELAN3-ALARM and wait until indicator **STATUS** starts flashing indicating successful micro-controller operation (see Fig. No. 1).
5. Indicator **LAN (green)** will flash indicating Ethernet connection activity, while indicator **LAN (yellow)** will be steady ON indicating successful Ethernet connection (see Fig. No. 1).
6. In less than 1 minute indicator **RS485** indicator will steadily light ON indicating the successfully established RS485 connection between ELAN3-ALARM device and ESIM364 system (see Fig. No. 1).
7. Once the device is up and running, it will automatically obtain a local IP address from the DHCP server, therefore manual configuration of ELAN3-ALARM is neces-



ELAN3-ALARM

ETHERNET COMMUNICATOR

User Manual v1.0

Compatible with:

- ESIM364 v02.07.00 and up.

Main features:

- Supported Ethernet connectivity: 10/100 Mbit.
- Enables Internet access on ESIM364 via Ethernet interface.
- Automated configuration.

ELAN3-ALARM is an add-on device designed to use with ESIM364 alarm system and operate in IP-based networks. The device is an Ethernet-based communicator that enables instant internet access allowing to perform the following:

- Establish a communication between ESIM364 and EGR100 middleware or Kronos IP protocol-based monitoring station software.
- Connect ESIM364 to ELDES Smart Security platform.
- Configure ESIM364 remotely.

1. CONTENTS OF PACK

Item	Quantity
1. ELAN3-ALARM	1
2. User manual	1

2. TECHNICAL SPECIFICATIONS

2.1. Electrical & Mechanical Characteristics

Power supply	10-24V 50Hz ~ 210mA max. / 10-24V --- 210mA max.
Dimensions	70x85x57 mm
Operating temperature range	-20...+55 °C
Humidity	0-90% RH @ 0... +40 °C (non-con- densing)

sary only if DHCP server is not supported by your internet service provider (ISP). For more details on ELAN3-ALARM configuration, please refer to *ELDES Configuration Tool* software's HELP section.

- Configure ESIM364 system in order to use it with ELAN3-ALARM. For more details, please refer to ESIM364 installation manual and *ELDES Configuration Tool* software's HELP section.

NOTE: Ensure that the ELAN3-ALARM device is not being blocked on the router, otherwise the device will be unable to transmit any data. To view or change the IP address of ELAN3-ALARM, please connect the device to the computer using the USB cable and *ELDES Configuration Tool* software. For more details, please refer to *ELDES Configuration Tool* software's HELP section.

4. TECHNICAL SUPPORT

4.1. Troubleshooting

Indication	Possible reason
Indicator STATUS is OFF	<ul style="list-style-type: none"> Power supply fault. No mains power. Micro-controller fault.
Indicator RS485 is OFF	<ul style="list-style-type: none"> Bad Y and G terminal wiring between ESIM364 and ELAN3-ALARM. ESIM364 is not compatible with ELAN3-ALARM. Please, contact your supplier to request the latest firmware for ESIM364. Damaged RS485 interface on ESIM364 and/or ELAN3-ALARM (Y and G terminals).
Indicators LAN(green) and LAN(yellow) are OFF	<ul style="list-style-type: none"> Bad Ethernet cable. Ethernet router is switched OFF.
All indicators are ON or flashing, but unable to receive any data to EGR100/Kronos-based software	<ul style="list-style-type: none"> Wrong ESIM364 configuration. TCP/UDP port not forwarded on the router for ELAN3-ALARM device's IP address and/or your ISP is permanently blocking a certain TCP/UDP port (-s). Wrong EGR100/Kronos-based software configuration.

4.2. Updating the Firmware via USB Cable

- Power down the device.
- Short-circuit (connect) the DEF pins.
- Connect the device via USB cable to the PC.
- Power up the device.
- The new window must pop-up where you will find the .bin file. Otherwise open My Computer and look for Boot Disk drive.
- Delete the .bin file found in the drive.
- Copy the new firmware .bin file to the very same window.
- Power down the device.
- Unplug the USB cable.
- Remove the short-circuit from DEF pins.
- Power up the device.
- Firmware updated.

5. ADDITIONAL INFORMATION

Limited Liability

The buyer agrees that the system will reduce the risk of fire, theft, burglary or other danger but that it does not guarantee against the occurrence of such events.

"ELDES UAB" will not take any responsibility for the loss of personal effects, property or revenue whilst using the system. The liability of "ELDES UAB" is limited to the value of the system purchased.

"ELDES UAB" is not affiliated with any mobile/wireless/cellular provider and is therefore not responsible for the quality of such services.

Manufacturer Warranty

The system carries a 24-month manufacturer warranty from "ELDES UAB".

The warranty begins the day the system is purchased by the user and the receipt must be retained as proof of purchase date. The warranty remains valid only if the system is used as intended, following all guidelines outlined in this manual and in accordance with the operating conditions specified.

The warranty is void if the system has been exposed to mechanical impact, chemicals, high humidity, fluids, corrosive and hazardous environments or force majeure factors.

SAFETY INSTRUCTIONS

Please read and follow these safety guidelines to safeguard yourself and others:


- DO NOT use the system where it can cause potential danger and interfere with other devices - such as medical devices.
- DO NOT use the system in hazardous environment.
- DO NOT expose the system to high humidity, chemical environment or mechanical impact.
- DO NOT attempt to repair the system yourself - any repairs must be carried out by fully qualified personnel only.



Please, use the 10-24V 50Hz ~ 210mA AC or 10-24V --- 210mA DC power supply unit that meets the EN 60950-1 standard. Any additional device you connect to the system, such as a computer, must also be powered by an EN 60950-1 approved supply. When connecting the power supply to the system, switching the polarity terminal places does not have any affect.



External power supply can be connected to AC mains only inside installation room with automatic 2-pole circuit breaker capable of disconnecting circuit in the event of short circuit or over-current condition. Open circuit breaker must have a gap between connections of more than 3mm and the disconnection current 5A.

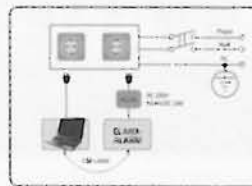

Disconnect the mains power before installing. Never install or carry out maintenance during stormy weather. The electric socket that powers the system must be easily accessible.



To switch the system off, unplug the external electric power supply or any other linked device that the system is powered from. A blown fuse cannot be replaced by the user. The replacement fuse has to be of the kind indicated by the manufacturer (Fuse F1 model - miniSMDC 0,5A).



If you use a computer for the device configuration, it must earthed.



The WEEE (Waste Electrical and Electronic Equipment) symbol on this product (see left) means it must not be disposed of in household waste. To prevent possible harm to human health and/or the environment, you must dispose of this product in an approved and environmentally safe recycling facility. For further information contact your system supplier, or your local waste authority.

Copyright © "ELDES UAB", 2013. All rights reserved

It is strictly forbidden to copy and distribute information in this document or pass to a third party without an advanced written authorization from "ELDES UAB". "ELDES UAB" reserves the right to update or modify this document and/or related products without a warning. Hereby, "ELDES UAB" declares that the Ethernet Communicator ELAN3-ALARM is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at www.eldes.it.

